Hestia 1200 Guillotine **Tunnel**


BASIC INSTALL SHEET



Version 2 03/07/24 Contents of manual may be updated without notice. For the latest version of this manual please refer to our website: www.livingfire.com.au

PAUL AGNEW DESIGNS


FIREBOX DIMENSIONS

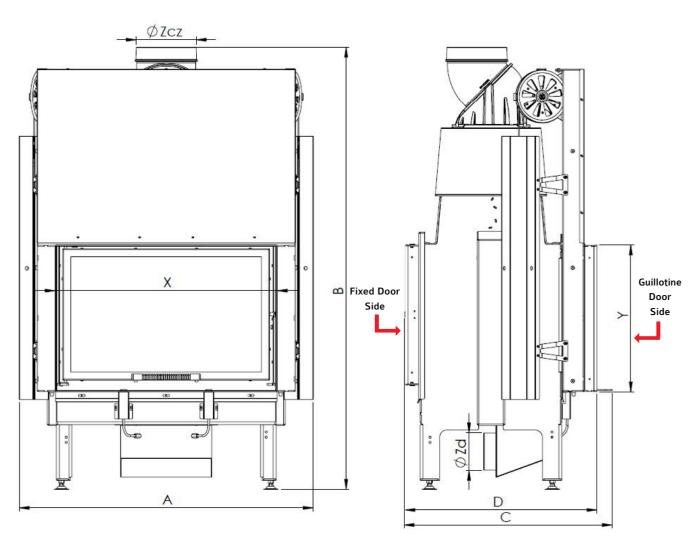


Dimensions [mm]	Hestia 1200 Guillotine Tunnel
Α	1324
В	1604
С	708
D	634
Х	1105
Y	492
Zcz	200
Zd	125

1.


HEBEL ENCLOSURE

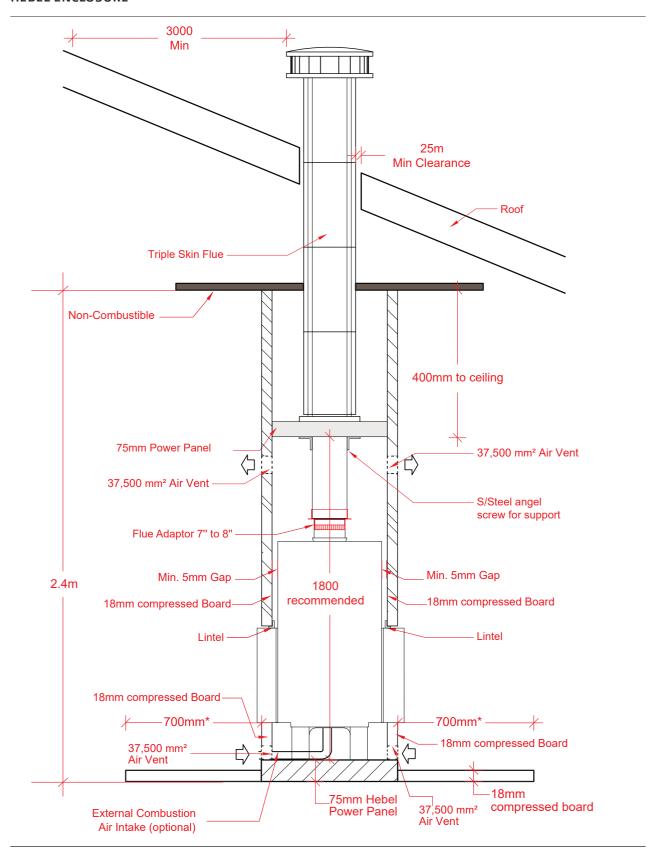

HEBEL ENCLOSURE

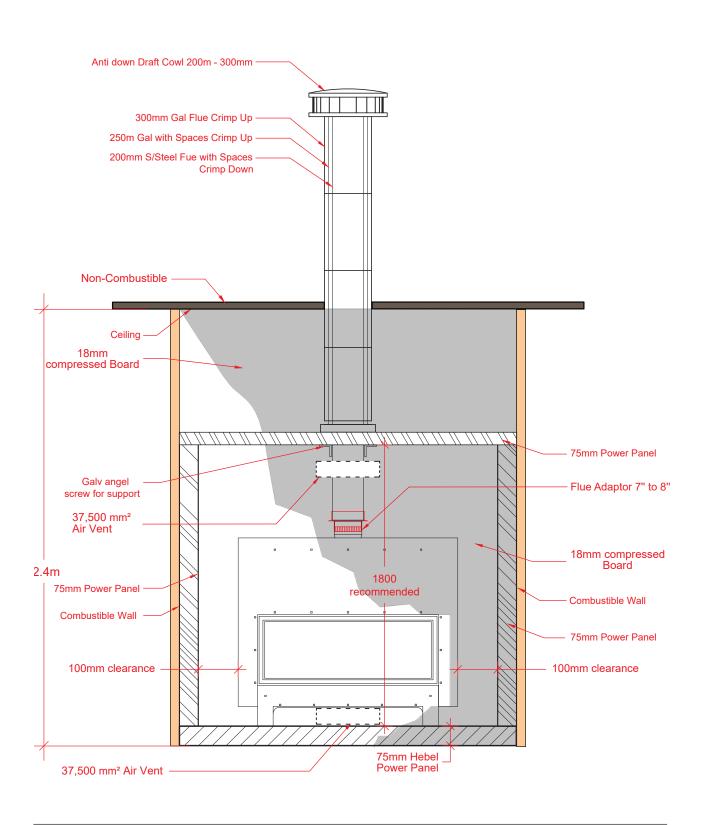

AIR VENTS

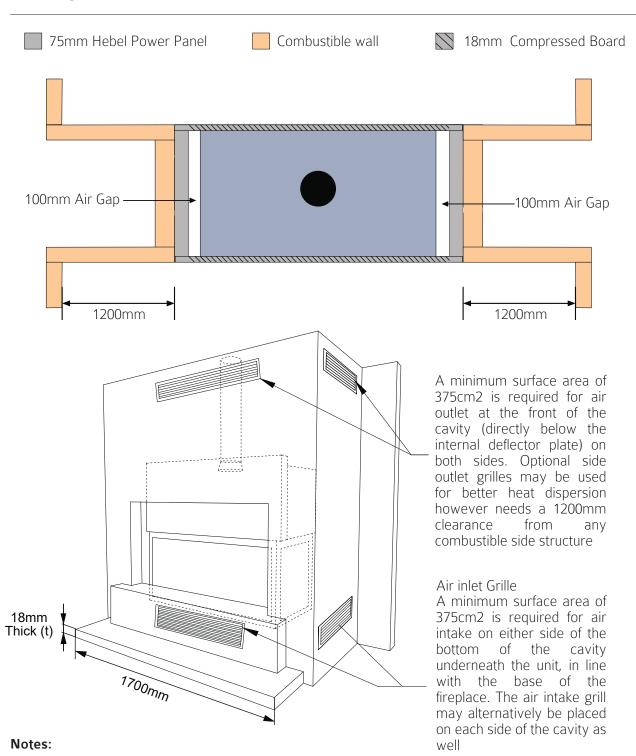


- 1. Air outlet grilles minimum air flow area required = 375cm2.
- 2. Air inlet grilles minimum air flow area = 375cm2.
- 3. All dimensions in millimeters.
- 4. Do not scale from these diagrams.
- 5. Air transfer kits mandatory for exempt units to comply to AS/NZ 4012/4013:2014. Fan optional depending on duct length.

IMPORTANT: NO BRICKWORK TO BE COMMENCED UNTIL FIREBOX IS PLACED IN POSITION

Hearth Clearance information

Please refer to the table below for the reference to your hearth. The 'A' mea-surements references the height of the unit off the floor and the 'B' mea-surement references the forefront of the hearth from the glass of the heater.

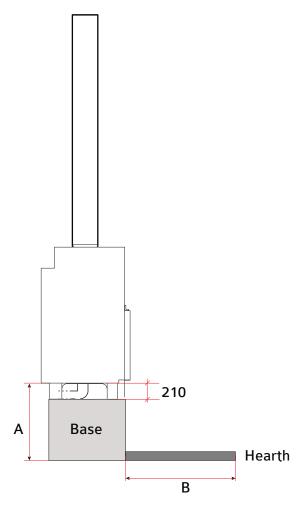

A	В
285 (minimum)	700
400	640
500	565
600	460
700	300 (minimum)